



Basic Soundboard Operating Instructions (Xenopixel)

Press and hold the switch for 3 seconds to turn the saber on (You will hear a “Power On” sound).

While the saber is in Sleep Mode (Saber on but Blade off)

1. Quick press the switch to ignite the blade.
2. Swing the saber to ignite the blade.
3. Press the switch for one flash (the Illuminated AV Switch will flash, and the saber will beep) to adjust the volume between High, Low, and Mute.
4. Press the switch for two flashes to change the sound font.
5. Press the switch for three flashes to cycle through different ignition styles.
6. Press the switch for four flashes to turn the background track on and off.
7. Press the switch for five flashes to power the saber off (You will hear a “Power Off” sound).

While the blade is ignited

1. Quick press the switch for a blaster deflect effect.
2. Press the switch for one flash to enter lockup mode.
3. Press the switch for two flashes to enter blade color menu. Quick press switch when it is on your preferred blade color to set it.
4. Press the switch for three flashes to go cycle through the different blade effects (Steady, Unstable, Pulse).
5. Press the switch for four flashes to turn the blade off.