



# BASIC SOUNDBOARD OPERATING INSTRUCTIONS (PIXEL)

## POWER ON

Press and hold the switch for 3 seconds to turn the saber on (You will hear a "Power On" sound). The saber will now be in **Sleep Mode** (saber powered on, but light and sound are off). If the saber is built with an Illuminated AV Switch option, the switch will be lit while the saber is in **Sleep Mode**.

## POWER OFF

Press and hold the switch, while in Sleep Mode, until you hear the saber say, "Power Off," to fully turn the saber off. Both the blade and switch will turn off when the saber is completely powered down.

### While the saber is in Sleep Mode (Blade and Sound Off)

#### **Ignite Saber (Turn Blade and Sound On)**

- Quick press the switch to ignite the saber (sound and blade will turn on), or
- Swing the saber to ignite the saber.

#### **Volume Control (High, Low, Mute)**

- Press and hold the switch for one beep (the Illuminated AV Switch will flash for each beep) to adjust the volume between High, Low, and Mute. Repeat process to switch between the options, the saber will say "High Volume," "Low Volume," or "Mute."

#### **Change Sound Fonts (9 different Sound Fonts)**

*Obi- Wan Kenobi, Rey, Ben Solo, Leia, Kylo Ren, Father and Son, Luke Skywalker, Qui-Gon Jinn, Anakin Skywalker*

- Press and hold the switch for two beeps to change the sound font. Repeat the process to change between the different sound fonts.

#### **Blade Ignition Styles**

*Standard Ignition, Unsteady Ignition, Block Ignition, Stack Ignition, Merge Ignition, Phaser Ignition, Swift Ignition, Storm Ignition*

- Press and hold the switch for three beeps to change the ignition style (blade animation when turning the blade on). Repeat the process to change between the different styles.

#### **Turn On and Off Background Track (Music Under the Sound Font)**

- Press and hold the switch for three beeps to turn the background track on. Repeat the process to turn the background track off and on again. The background track will play while the blade is turned off.

### While the saber is ignited (Blade and Sound on)

#### **Blade Effects**

- **Blaster Deflect:** Quick press the switch for a blaster deflect effect.
- **Lockup Mode:** Press and hold the switch for one beep to enter lockup mode, and quick press the switch to exit lockup mode. This imitates the lightsaber being locked up with another blade.
- **Blade Style Animations:** Press and hold the switch for three beeps to change the blade style animations (Steady, Pulse, Rainbow, Candy Blade, Unsteady, Lightning, Morph 1, Raindrop, Morph 2, Flicker, Pattern 1, Pattern 2, Rainbow Morph, Strobe). Repeat the process to change between them.

#### **Change Blade Colors**

- **Blade Color Menu:** Press and hold the switch for two beeps to enter blade color menu. The saber will start cycling through the blade colors on its own. Quick press switch when it is on your preferred blade color to set it.

#### **ENTER SLEEP MODE (Turn off Saber)**

- Press the switch for four beeps or quickly pull the saber backwards to put the saber back in **Sleep Mode** (The Background Track will continue to play if turned on).